

FIG. 1

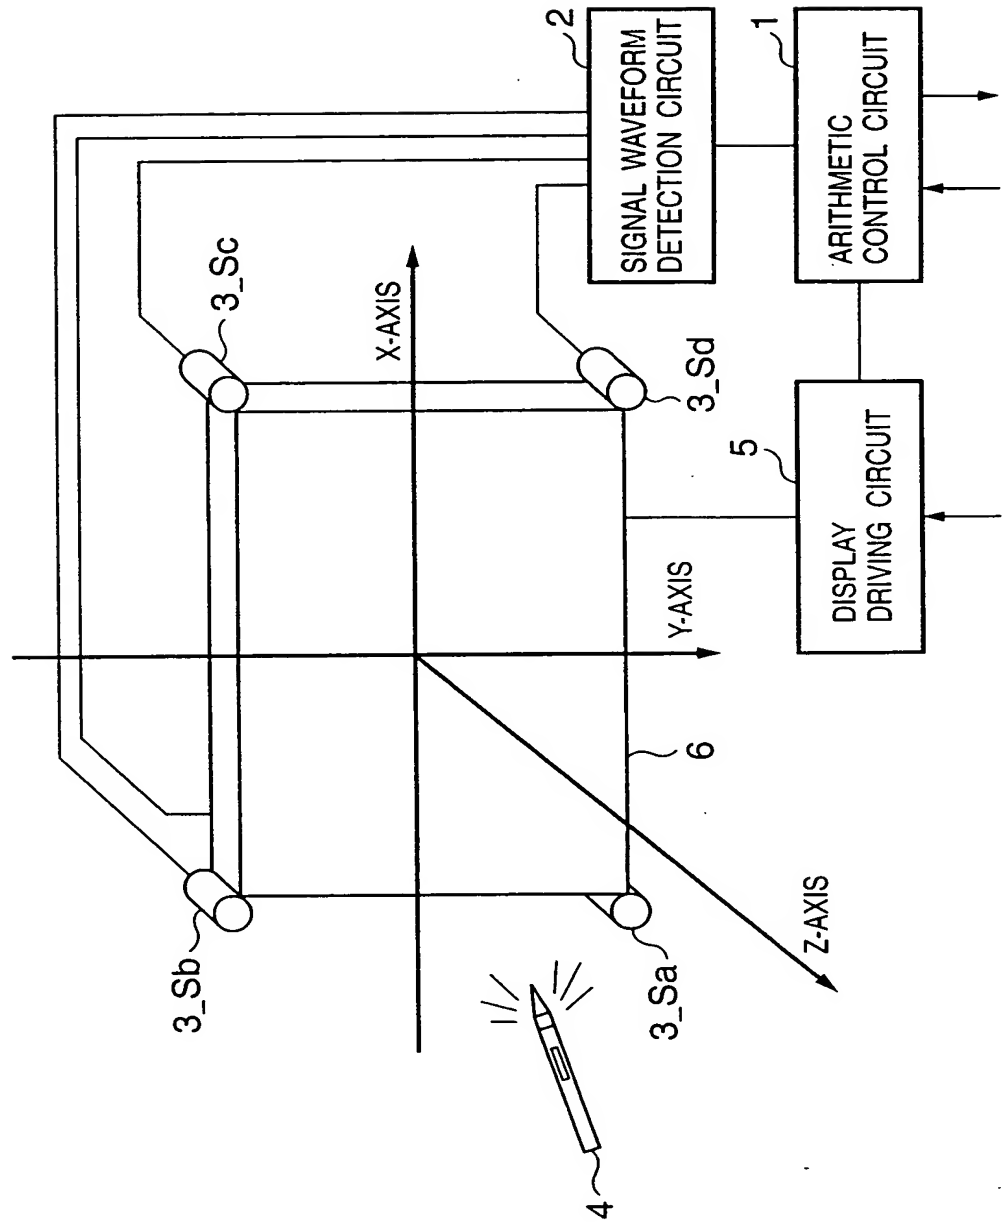


FIG. 2

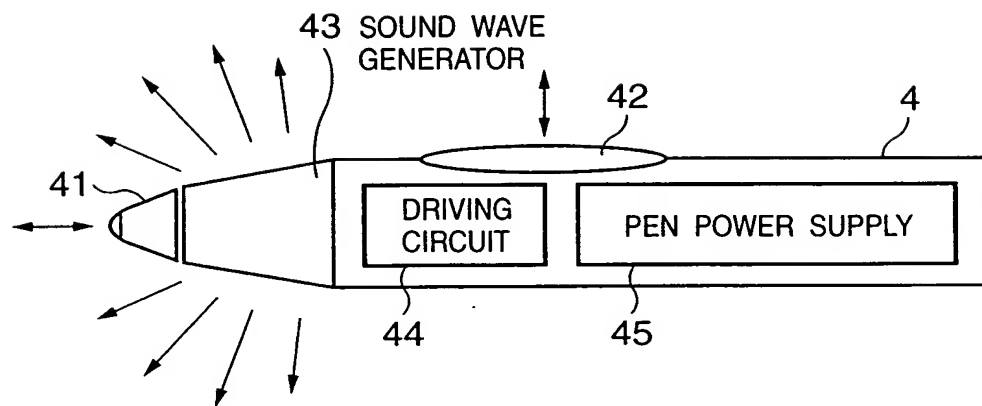


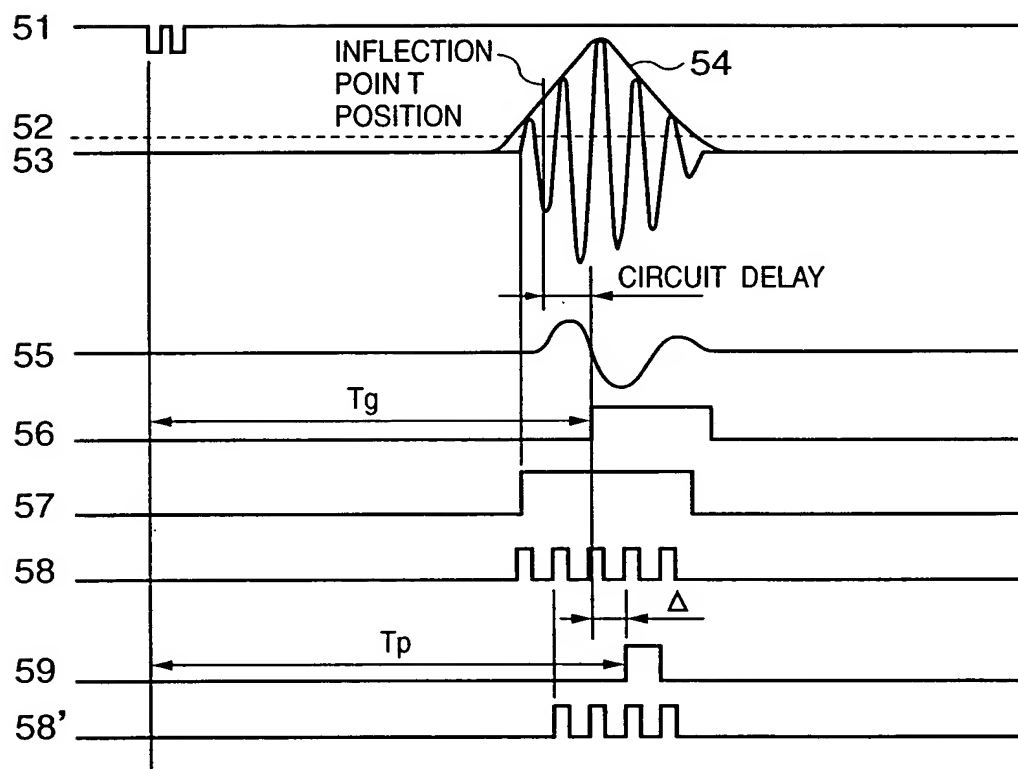
FIG. 3

FIG. 4

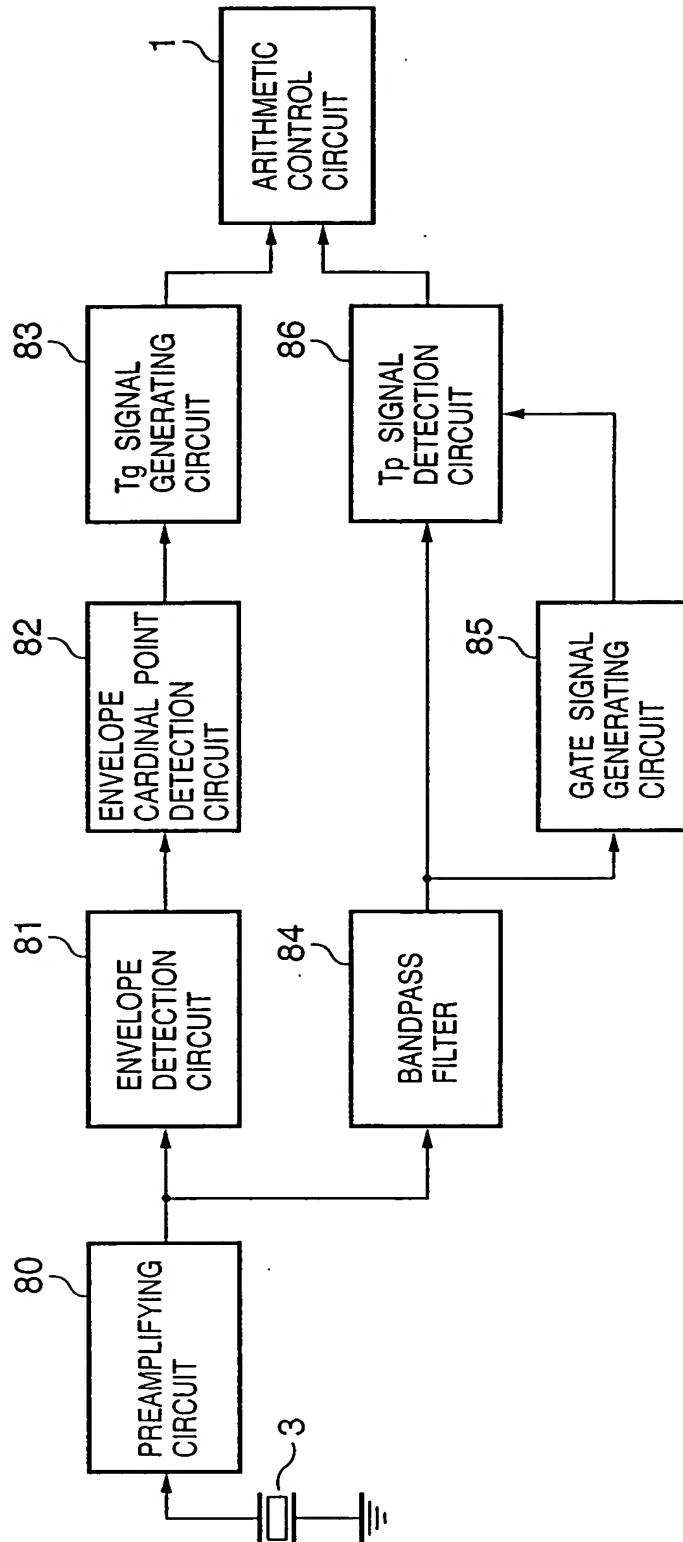


FIG. 5

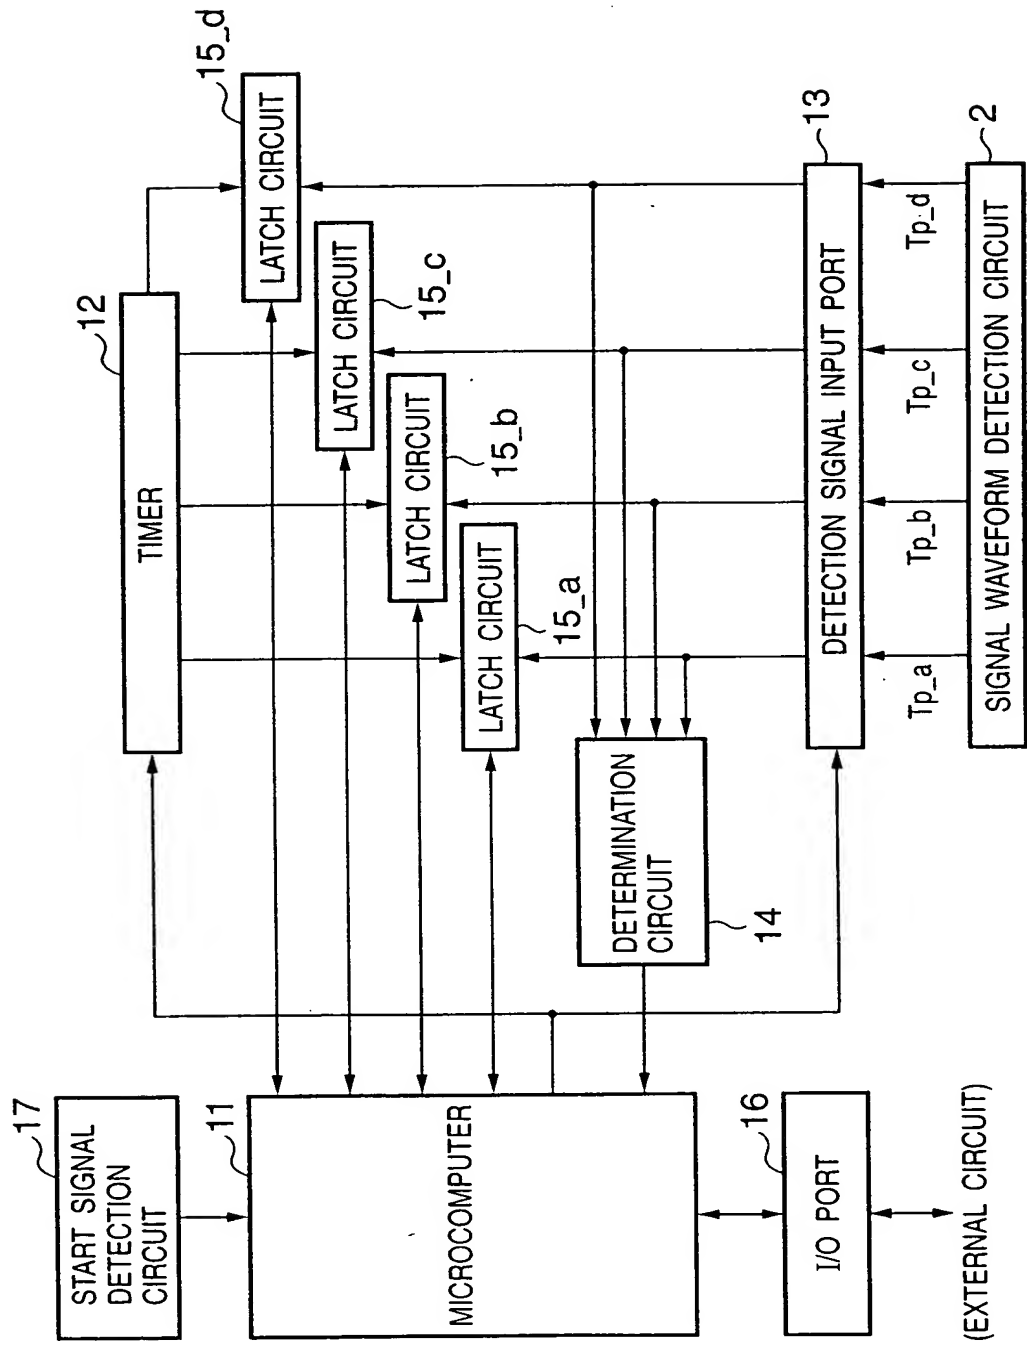


FIG. 6

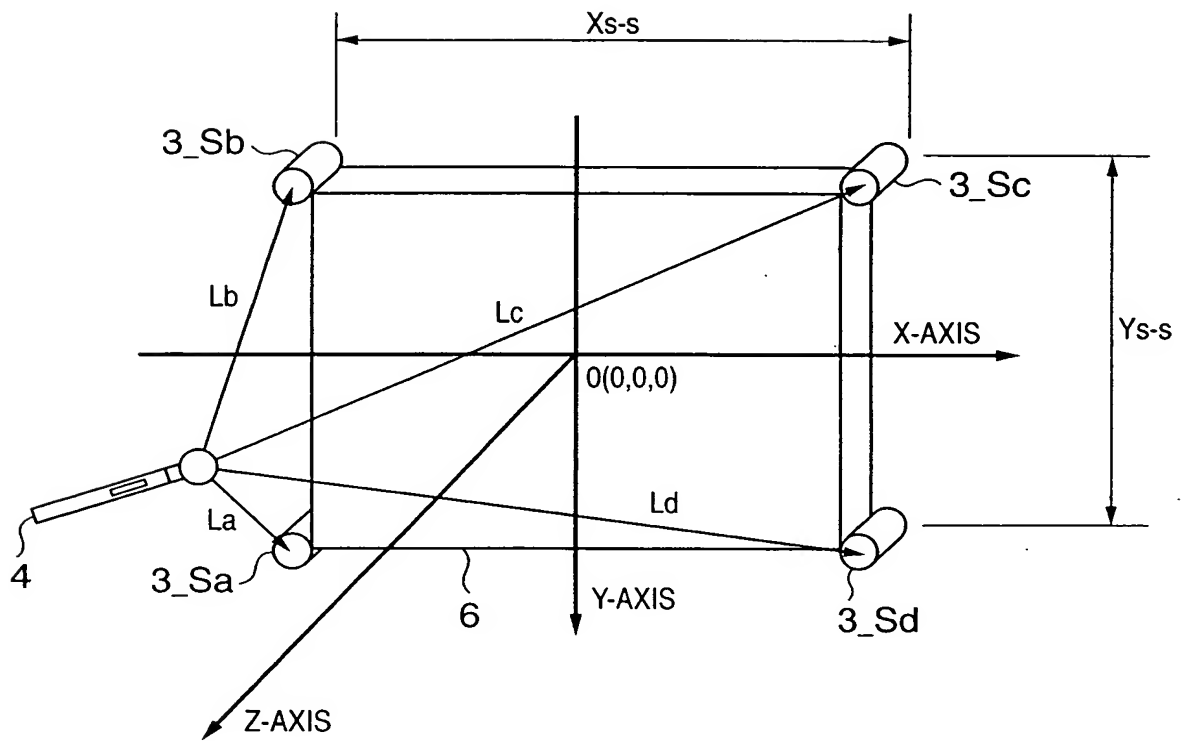


FIG. 7

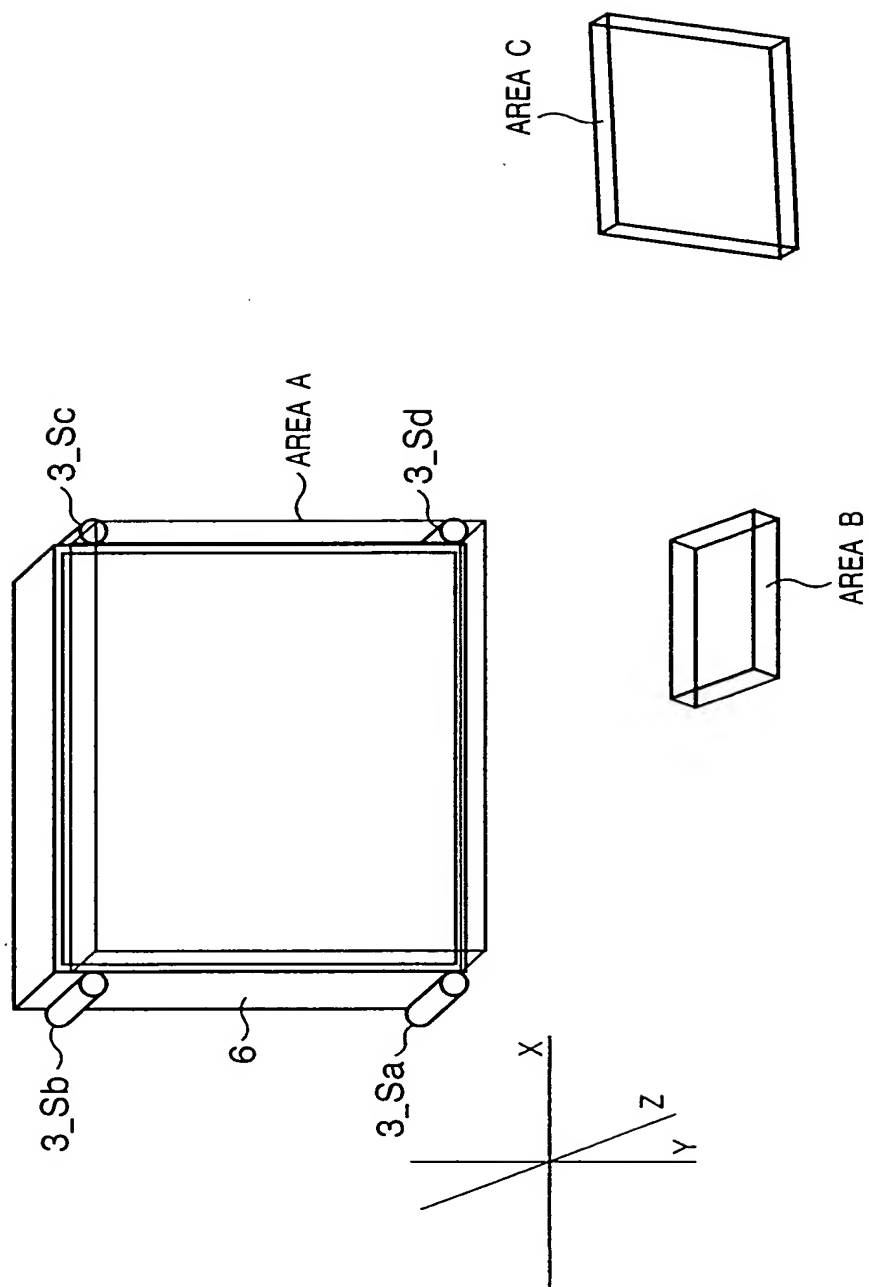


FIG. 8

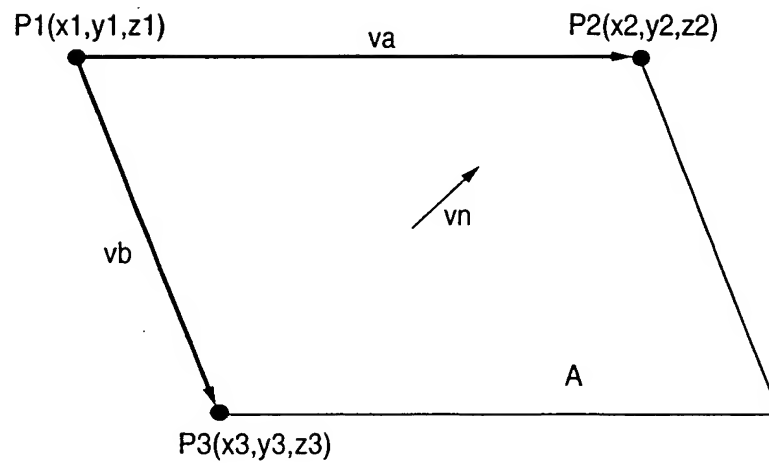


FIG. 9

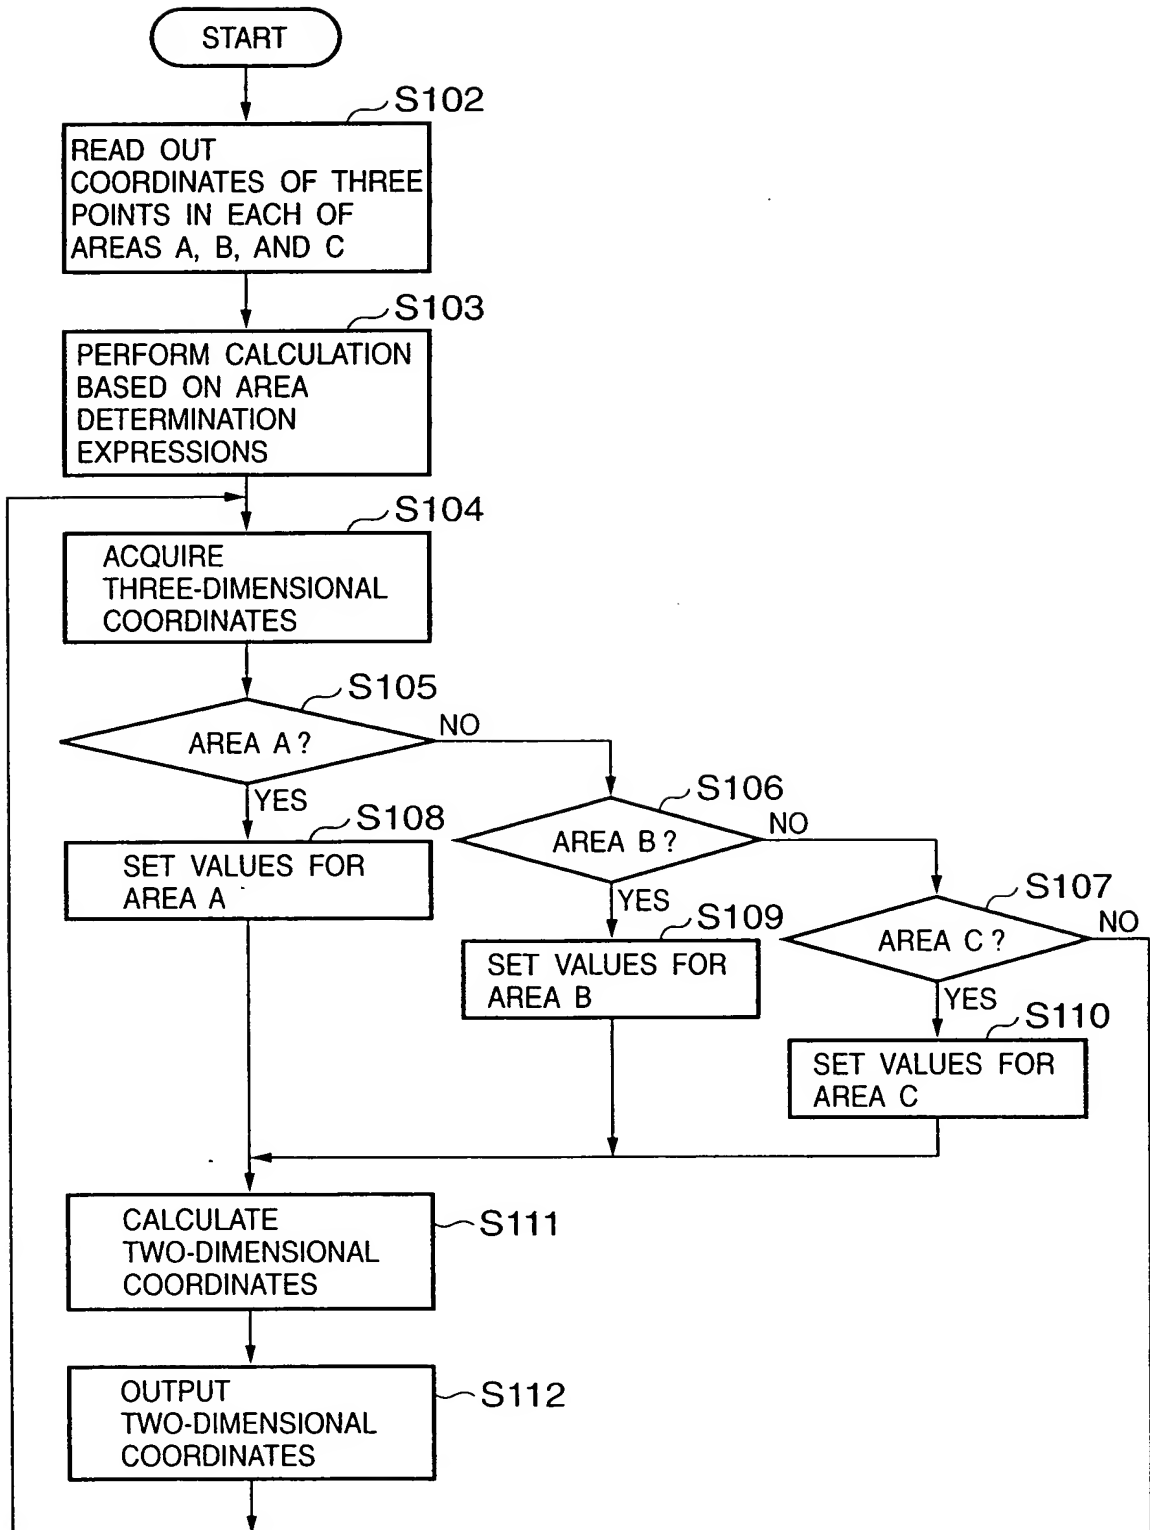




FIG. 10

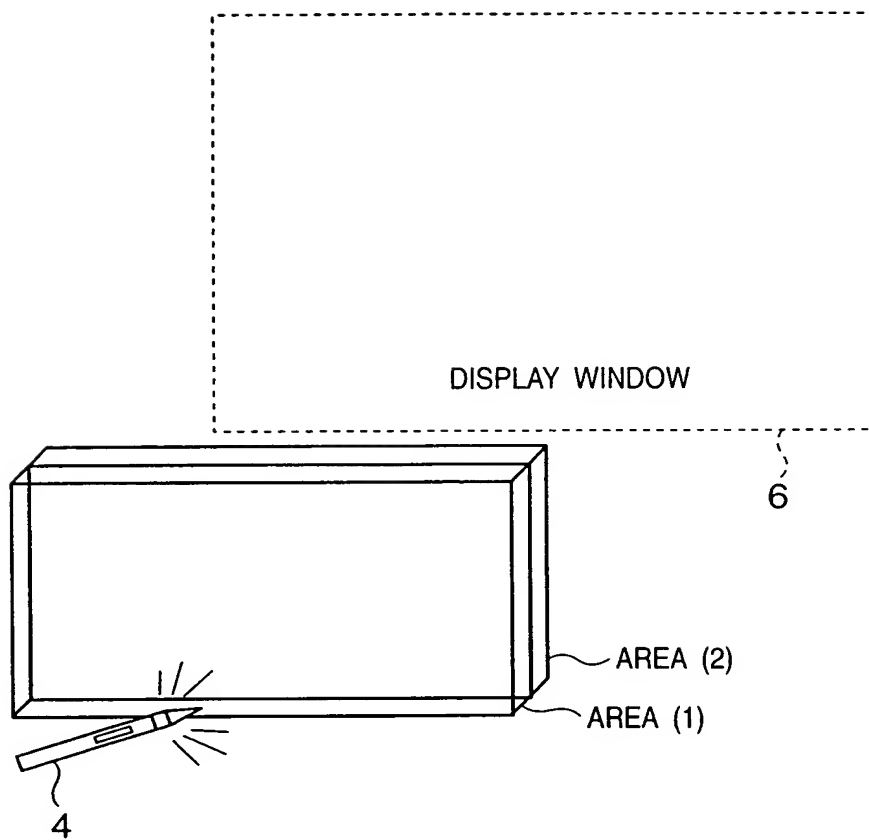


FIG. 11

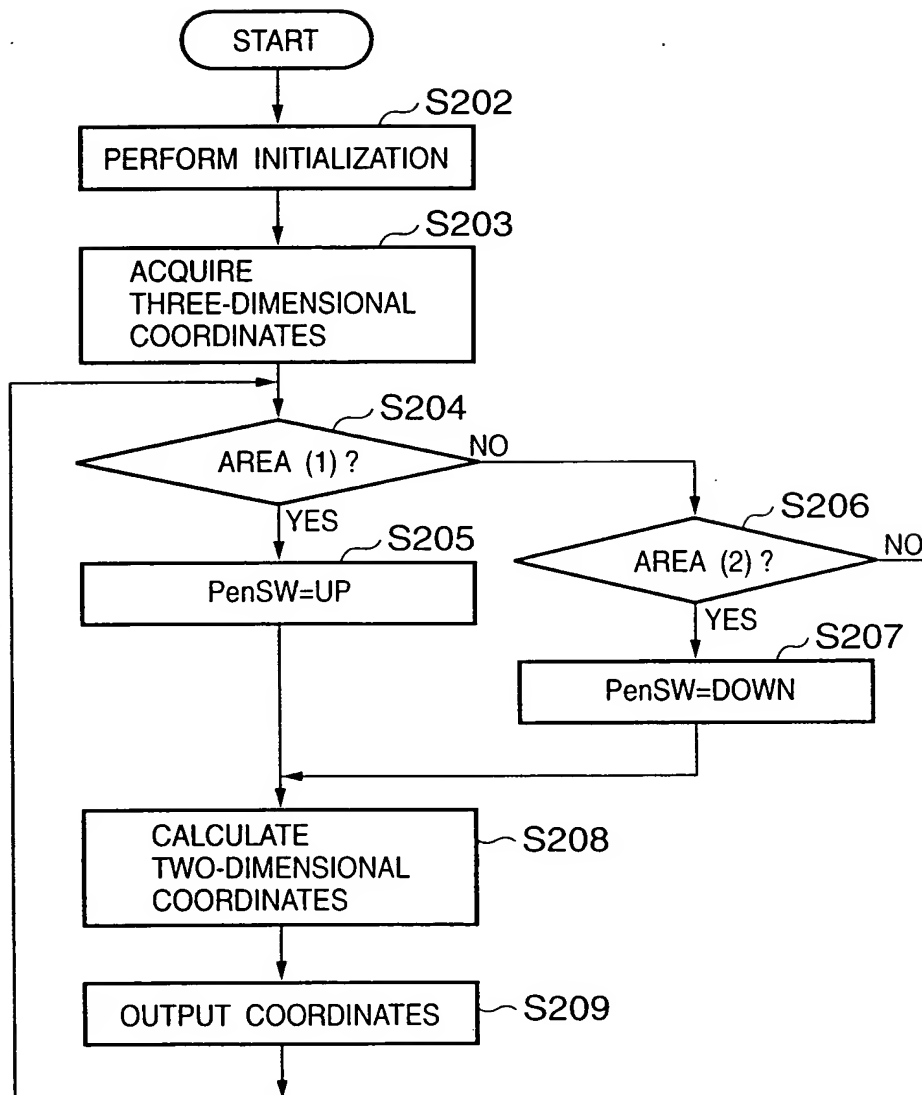


FIG. 12

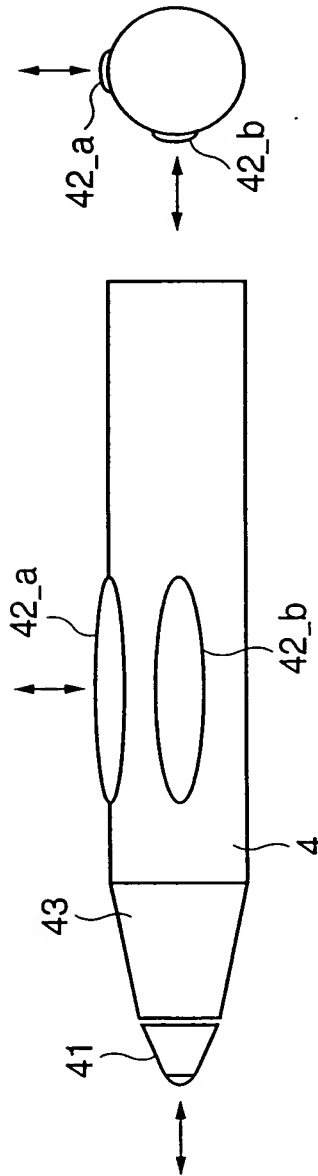


FIG. 13

13/13

AREA	PEN TIP SWITCH 41	PEN SIDE SWITCH 42_a	PEN SIDE SWITCH 42_b	PEN DOWN SIGNAL
AREA A	LEFT	LEFT	RIGHT	PEN TIP SW
AREA B	DOUBLE CLICK	RIGHT	LEFT	SIDE SW1
AREA C	LEFT	LEFT	RIGHT	DOWN